

DANCOVER[®]

.com

Manual
for
Inflatable sofa/armchair,
Chesterfield style

SOFA INSTRUCTION

INSTRUCTIONS

Make sure that the following objects are in the package:

- Inflatable sofa and an electric pump for inflating and deflating.
- 3 universal size nozzles + a repair kit.

Inflation:

- Spread out the product on a plane area. Remember to check the surroundings for sharp items which can cause damage while inflating.
- Attach the electric pump to a power outlet. Remember to keep the switch off
- Fit the medium size nozzle onto the nose of the pump.
- Remove the valve on the back of the item. Cautiously insert the nozzle of the pump into the valve. Press the nozzle in more to lock the connection firmly & properly.
- Inflate part 1 by switching on the pump. You can now see the product getting bigger and bigger to its full shape within seconds!
- As the segment reaches its complete working pressure, switch the pump off and pull out the nozzle. Quickly close the valve.
- Replicate this process for all valves on the item.

Deflation:

- Unscrew the valve(s) and air will straight away escape.
- Fold the objects flat and then fold them in the direction of the valve so you are pushing the air out.
- If it's necessary, then use a pump to suck out the air, attach one of the nozzles to the deflation end of the pump. Insert the nose of the nozzle into valve and turn the pump on.
- The pump will now function as a vacuum and suck out the air.
- Fold up the item and put it in the bag for storage or travel. When the items is not being used, keep it in a dry and cool place.
- You should avoid direct sunlight and/or any appliances that might generate heat.

DISCLAIMER

For best results:

- Ensure that the object is at room temperature before inflating it
- You should inflate and deflate the item numerous times before putting weight on it to broaden the material to its natural shape.
- Do not over or under inflate the object.
- The product is planned for use as a bed, sofa or lounger. There for it is not a a toy, and not intended as a life saving device.
- Keep the object away from sharp edges, nails or any pointed objects.
- Do not use the object for babies or persons with limited mobility, while they might roll off the sofa.
- Do not allow kids to play or jump on the products. If this happens the product might puncture.
- Do not place near or against heaters, open flame or other hot objects.
- The maximum weight load is 200 Kg for double seat.

The maximum weight load is 120 Kg for single seat.



Great danger – small parts is not for children under 3 years old

Keep all the bags and the electrical devices away from children. While every effort has been made to ensure the maximum degree of safety in all equipment, we cannot guarantee freedom from injury. The user assumes all risks of injury due to use. All products are sold in this condition, which no company representative can change or waive.



Contact information

Head office:

Dancover A/S
Nordre Strandvej 119 G
3150 Hellebæk
Denmark

For more information
please visit:
www.dancovershop.com

National contact

Denmark: 70 26 76 20
denmark@dancover.com

UK: 020 8099 7570
uk@dancover.com

Germany: 041 0266 7040
germany@dancover.com

France: 0975 181 800
france@dancover.com

Sweden: 040 233 262
sverige@dancover.com

Finland: 0 931 581 720
suomi@dancover.com

Poland: 22 300 8602
polska@dancover.com

Luxembourg: +49 041 0266 7040
luxembourg@dancover.com

Portugal: 308 800 899
portugal@dancover.com

Spain: 911 436 828
espana@dancover.com

Italy: 02 479 21 198
italia@dancover.com

Switzerland: 0840 000125
schweiz@dancover.com

Austria: 0662 626935
austria@dancover.com

Norway: 231 00 690
norge@dancover.com

Nederland: 0 858 880 524
nederland@dancover.com

Ireland: 0 151 33 003
ireland@dancover.com

Belgium: 0 28 08 08 09
belgique@dancover.com