


DANCOVER[®]




Manual
for
Greenhouse Strong NOVA
3m Series


Greenhouse Strong NOVA





Basic Kit 3x4m (+ 2m Extension Kit)






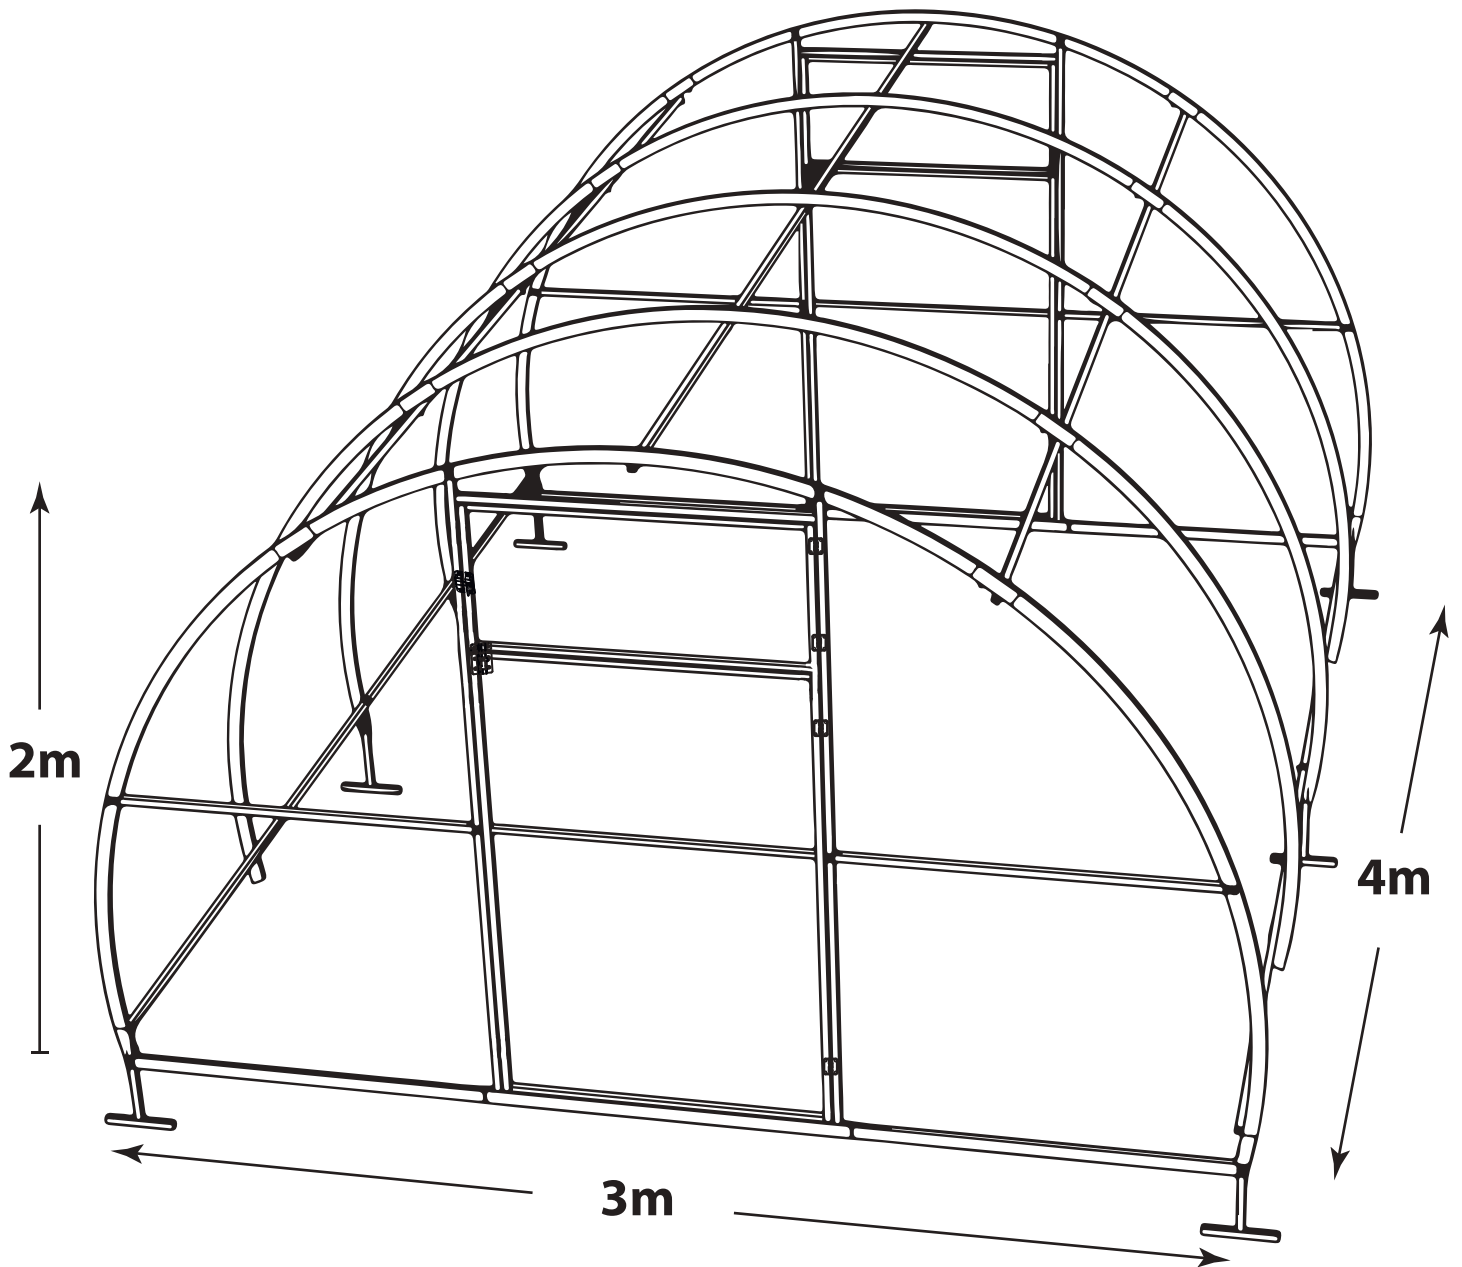


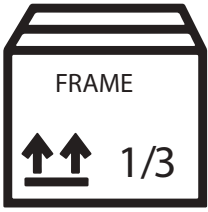


BASIC KIT 3x4m

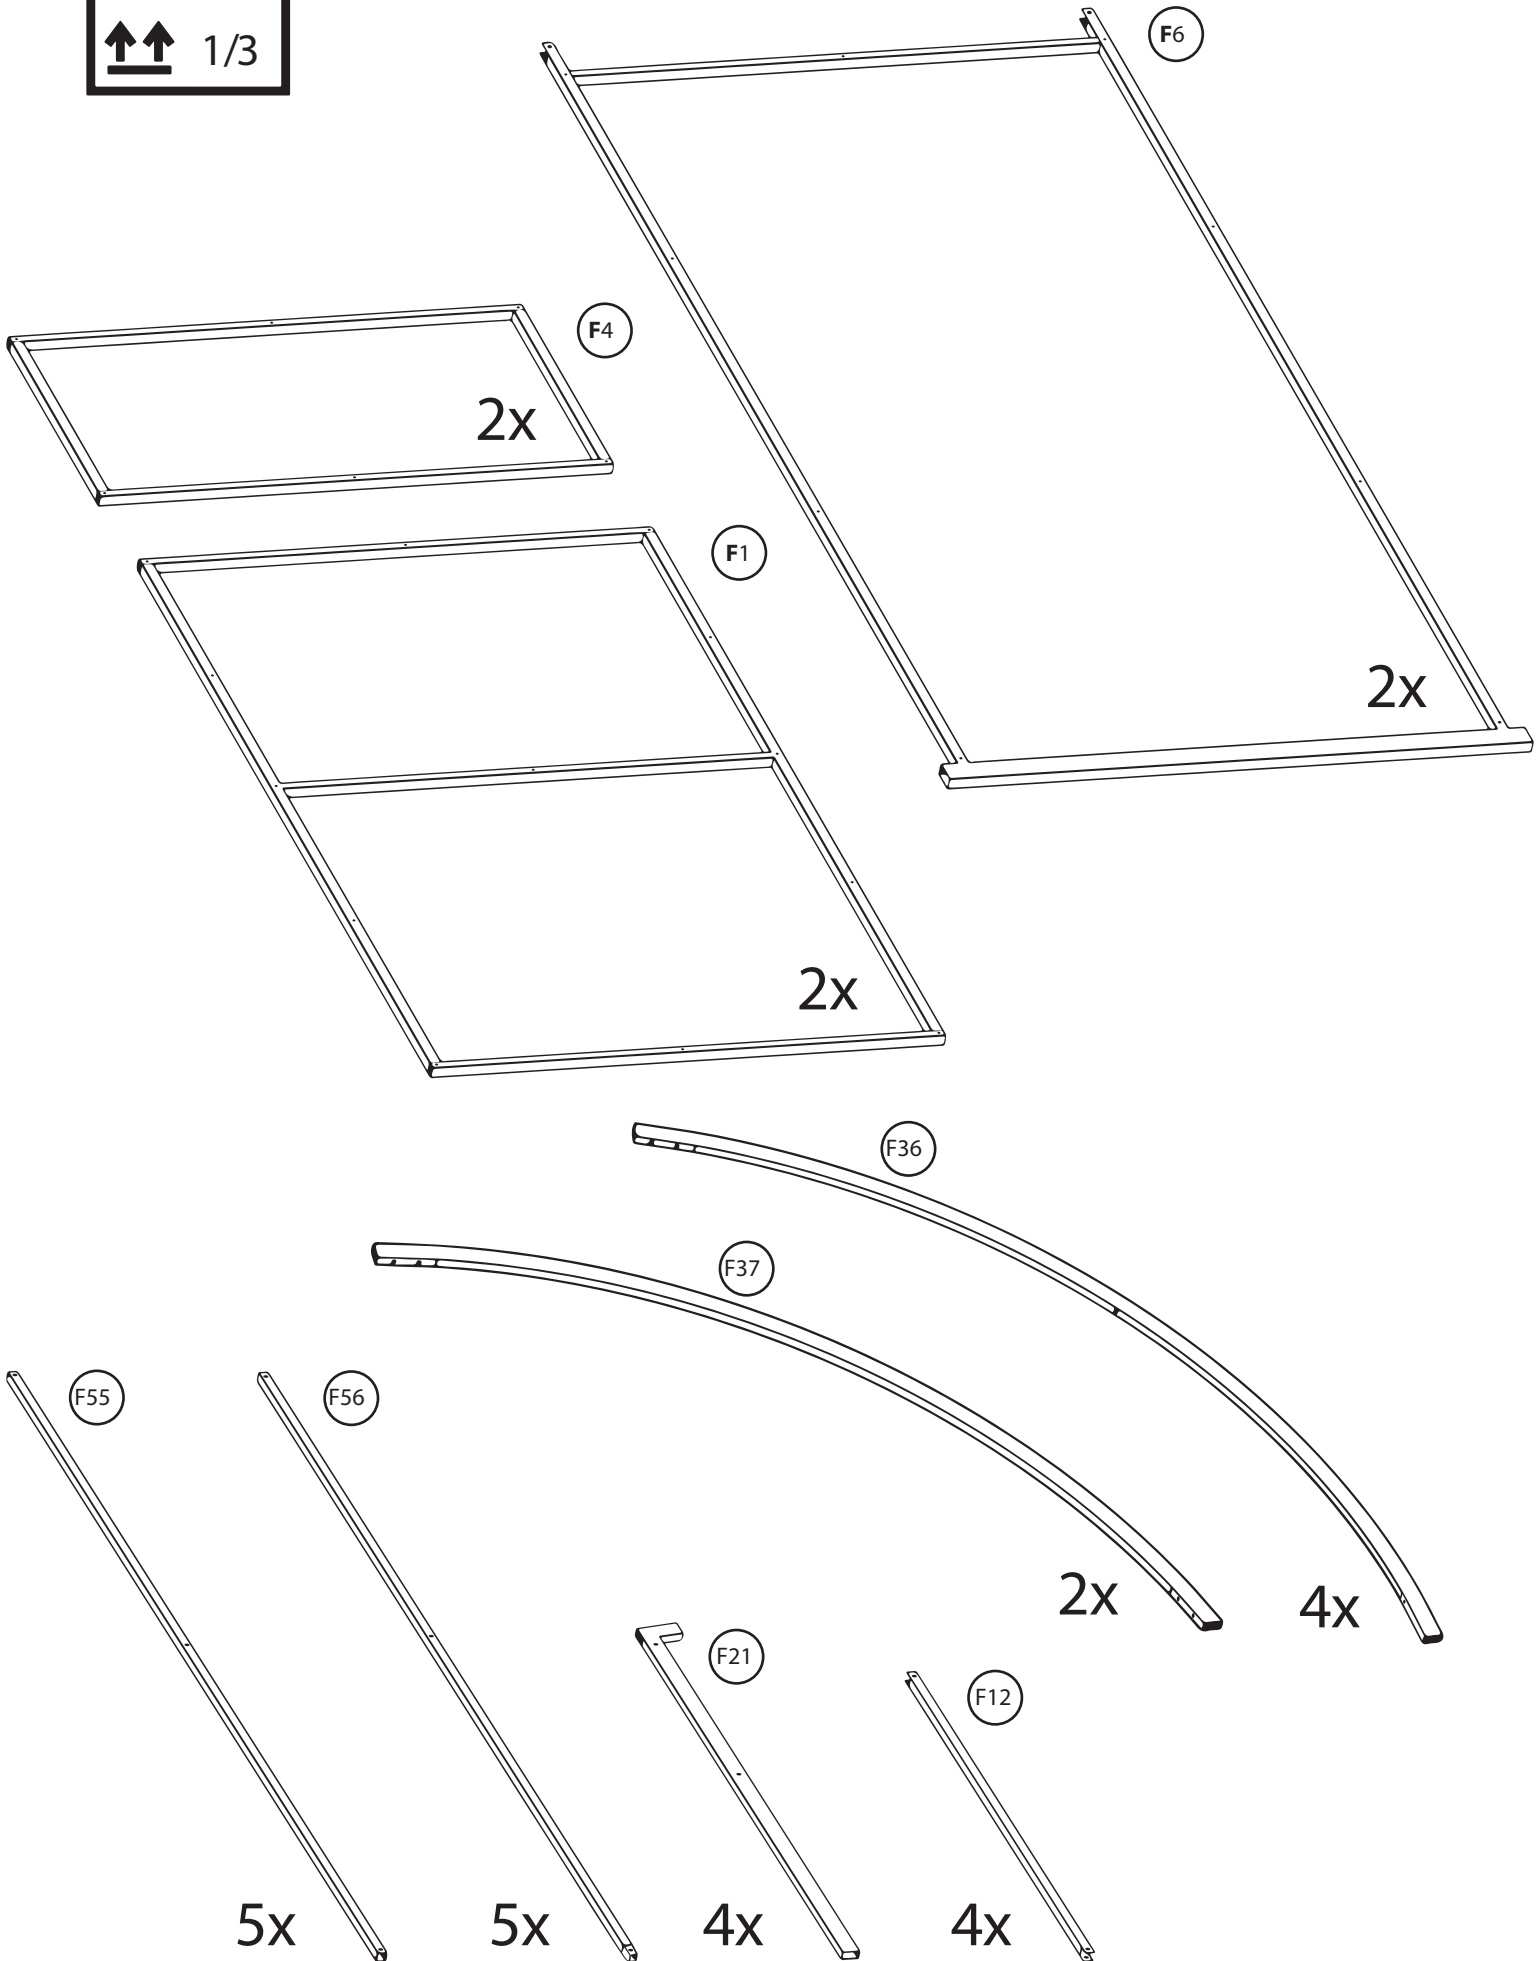

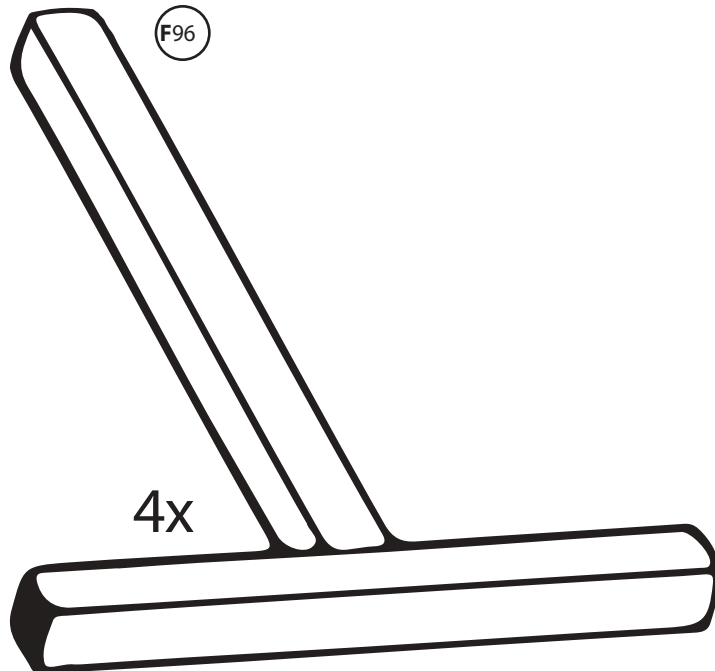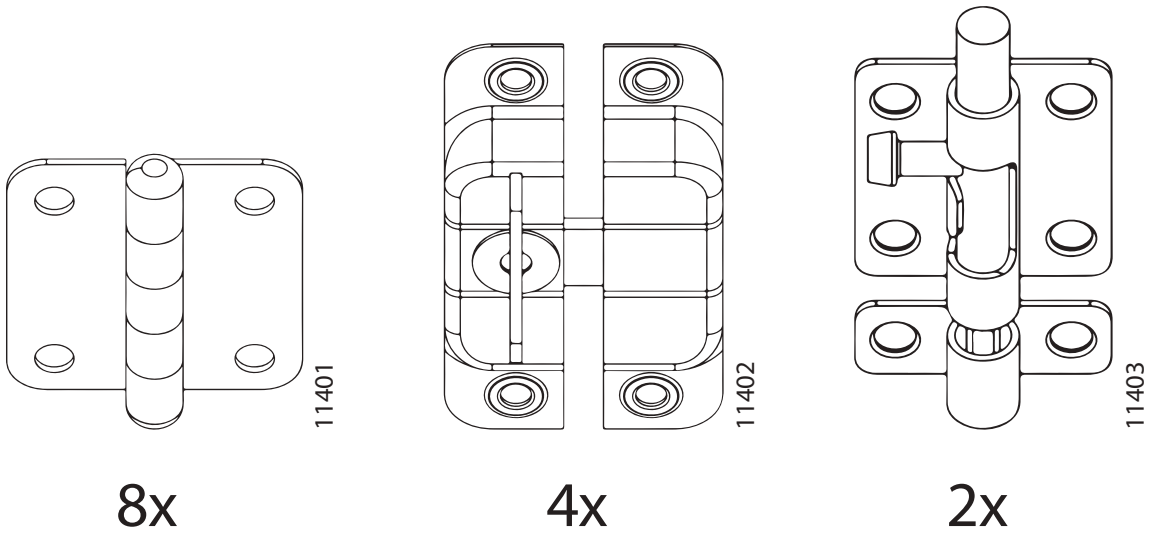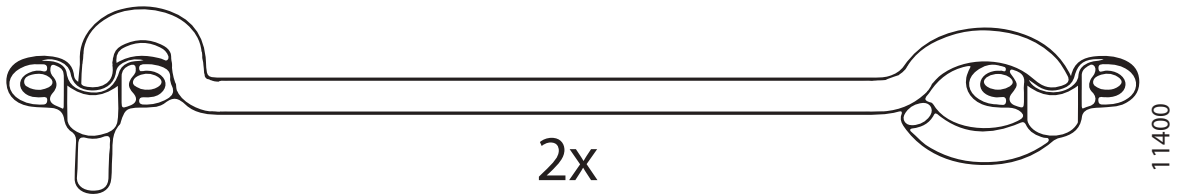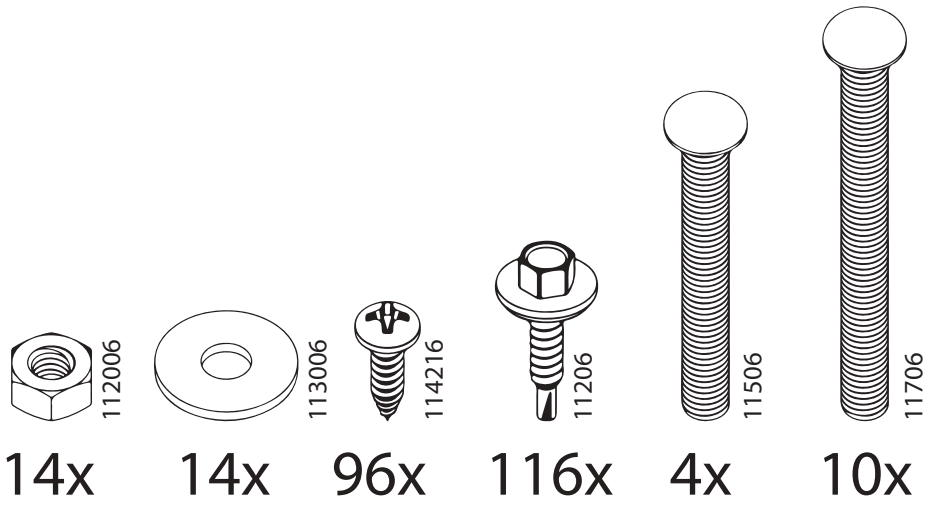

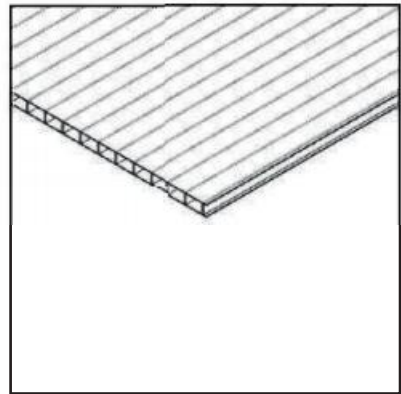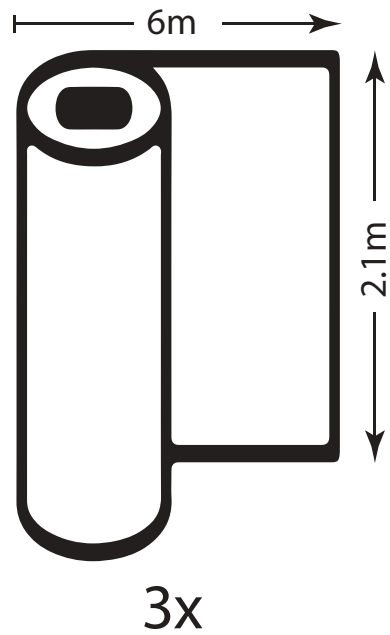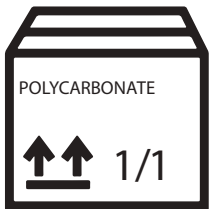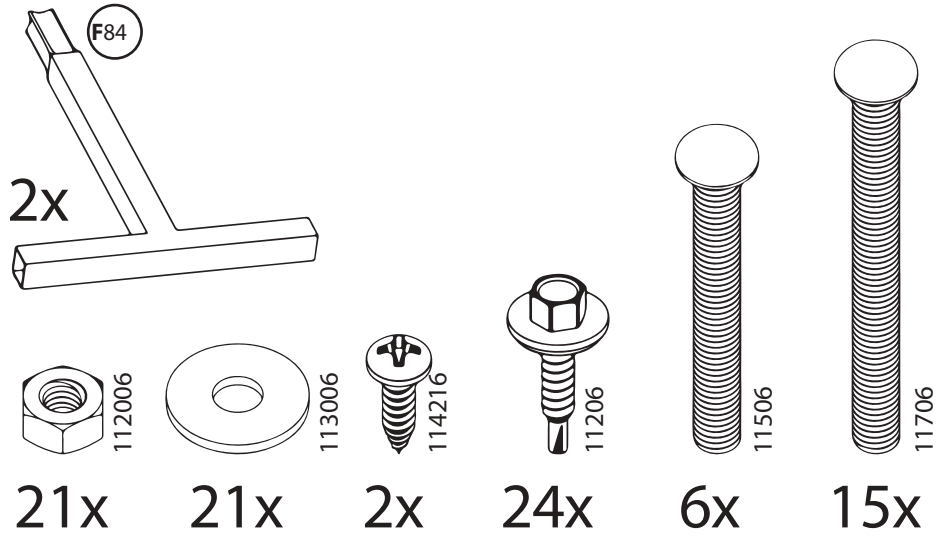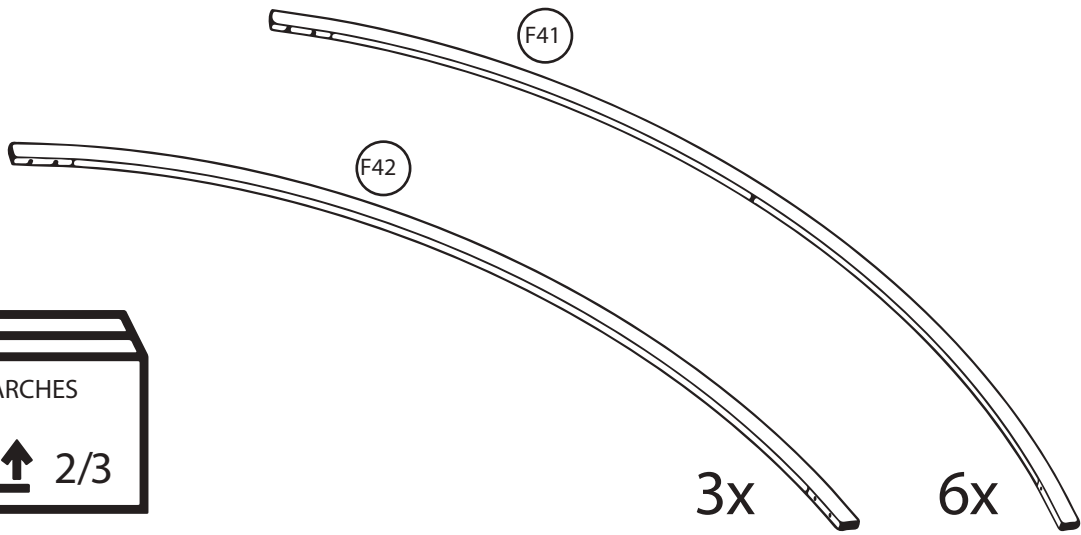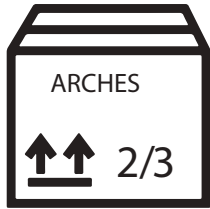


1



11506

+



113006

+




112006


x4

F37

F36

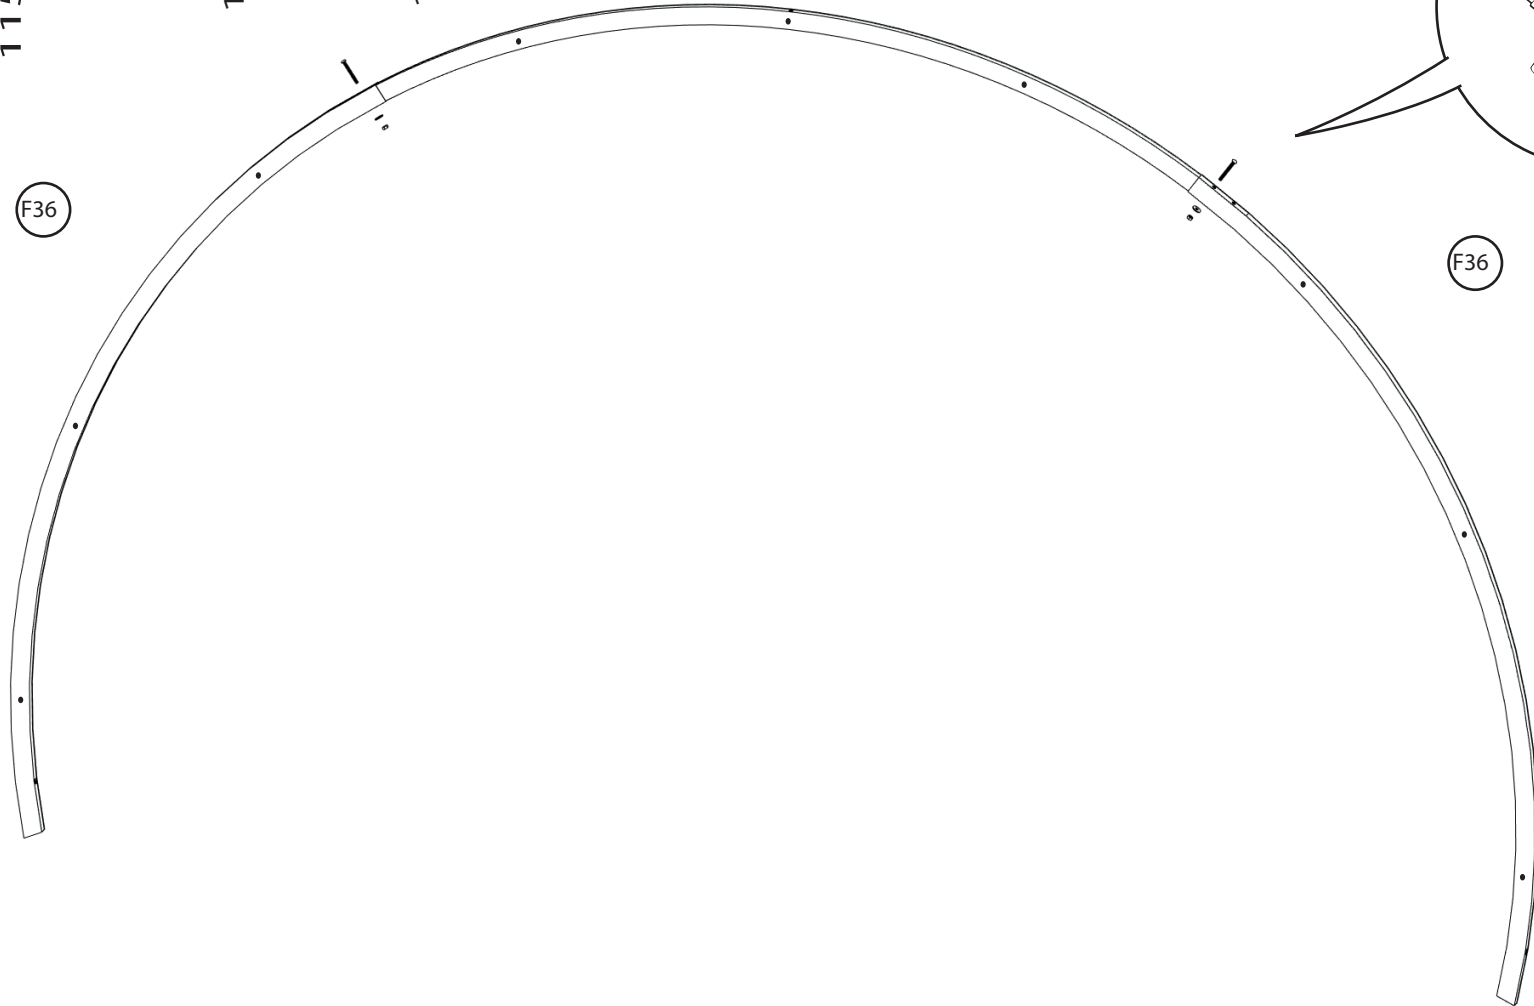

F36

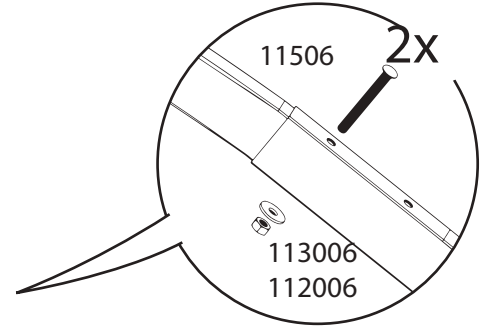







11506

2x

113006
112006


2x

2

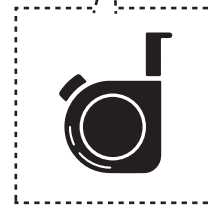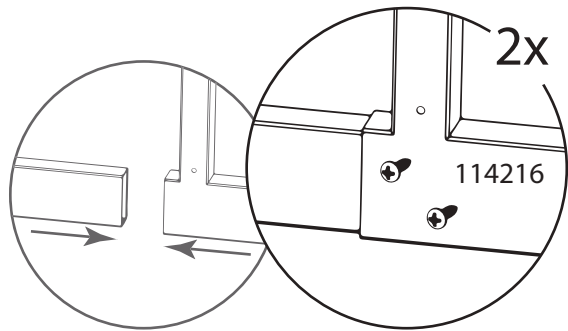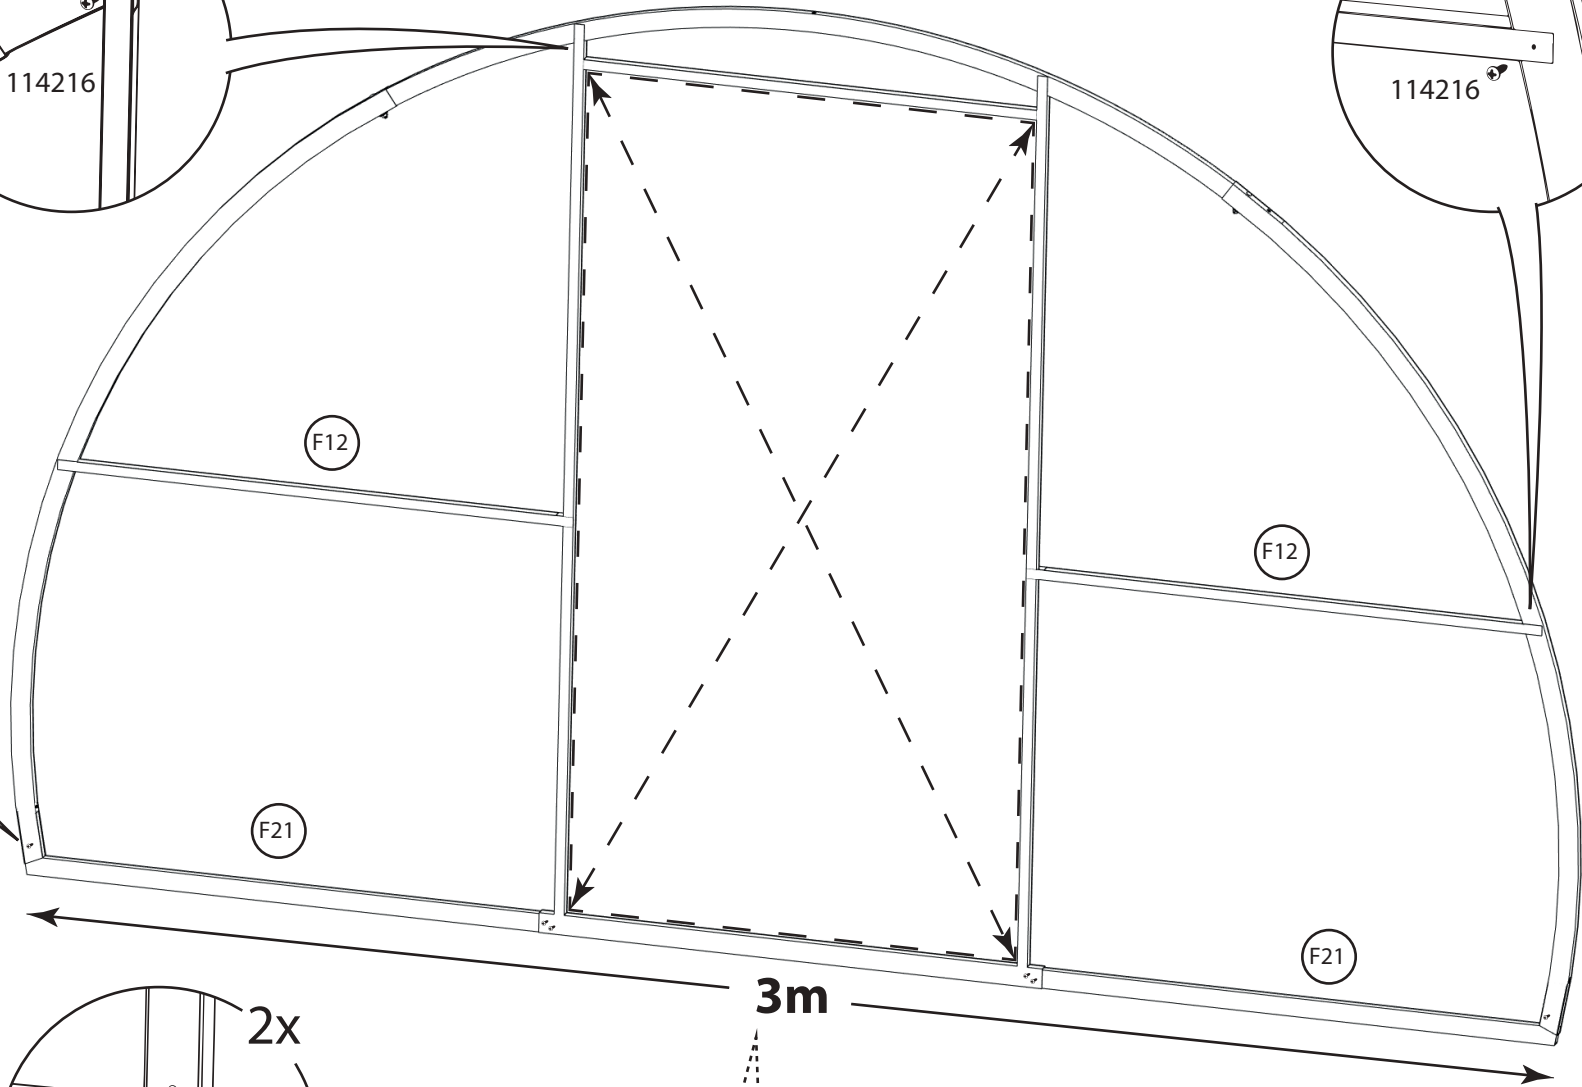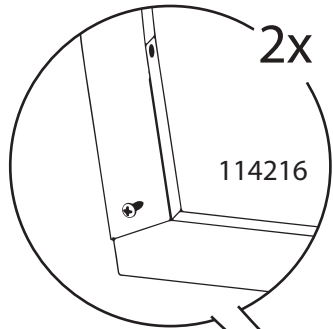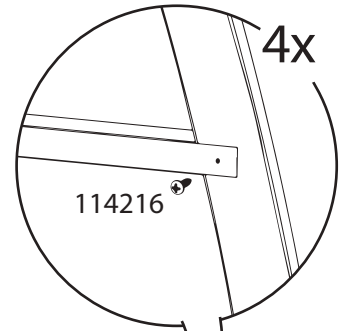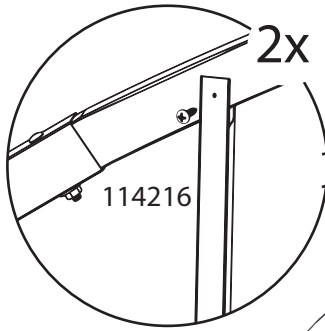



2x

3

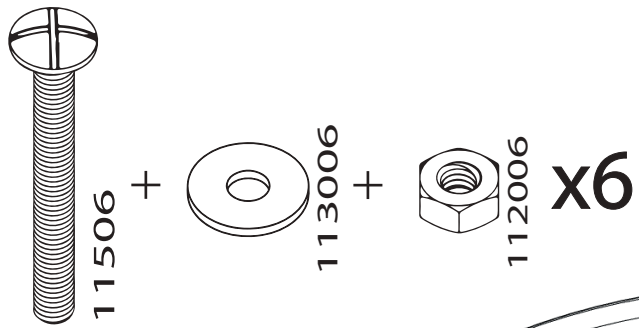

F42





F41

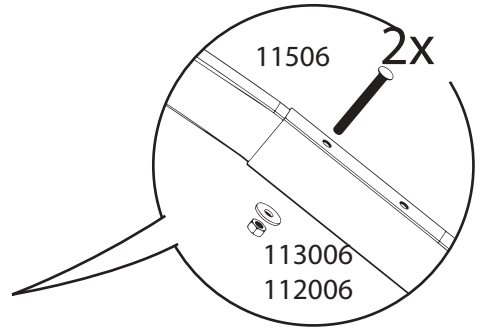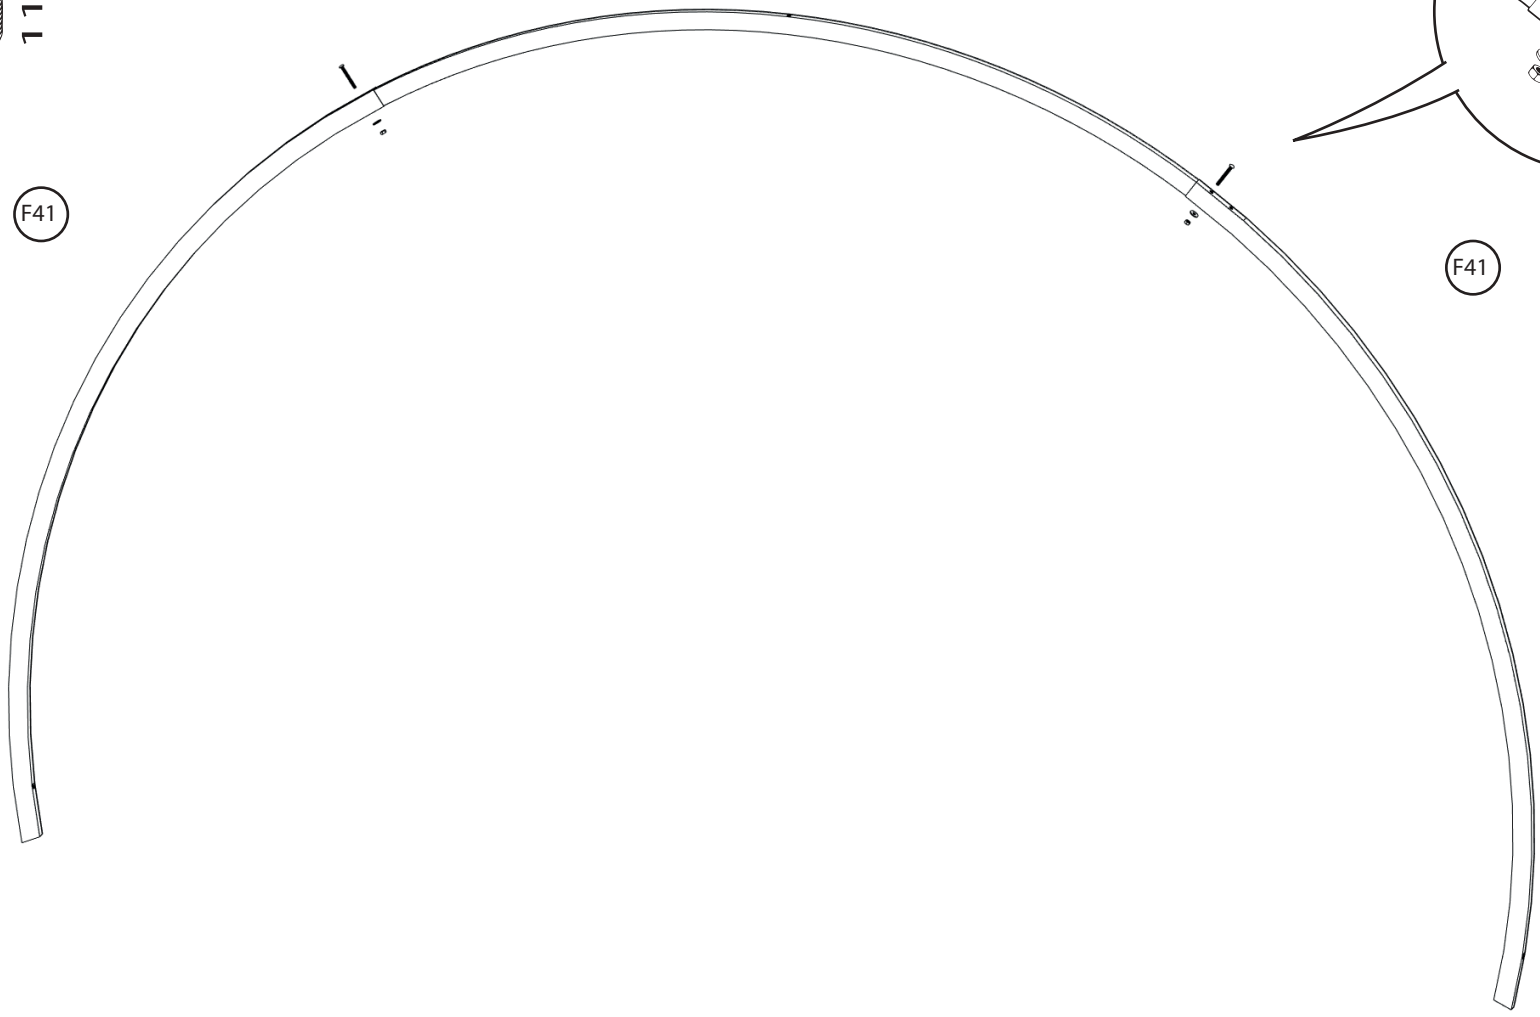





F41

3x

4



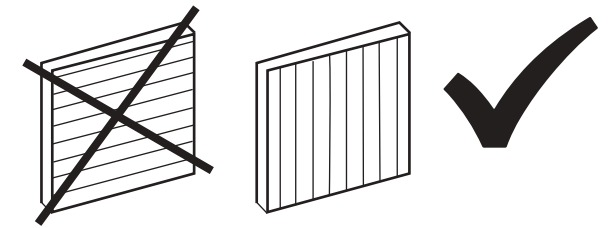
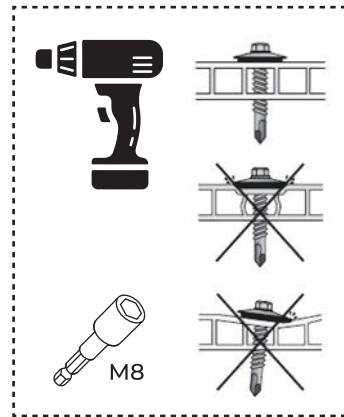
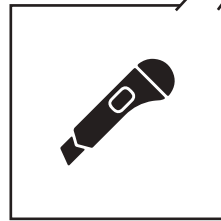
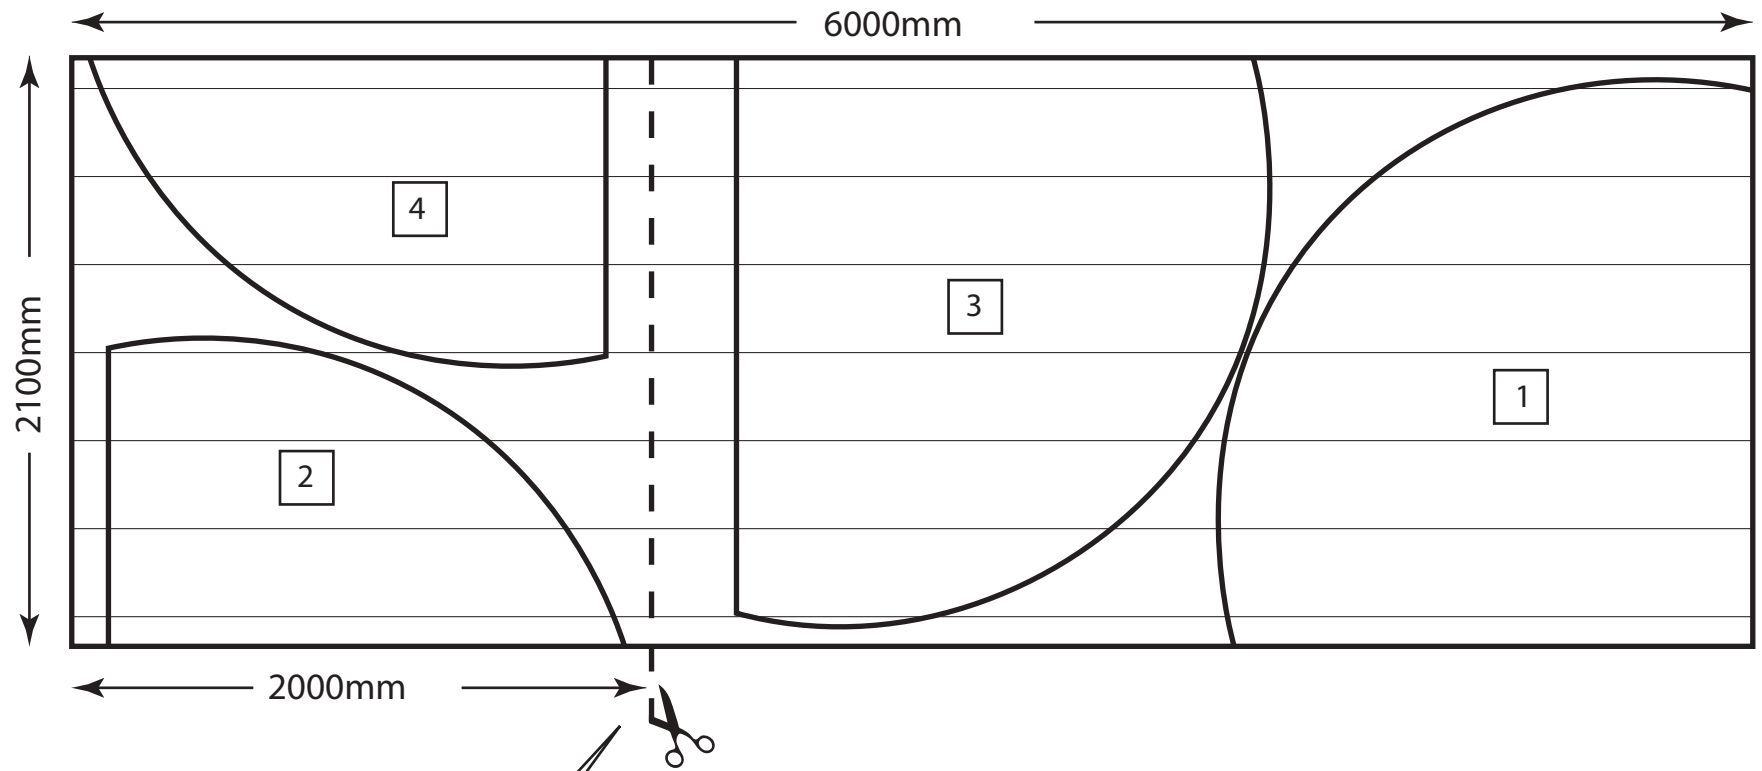


5

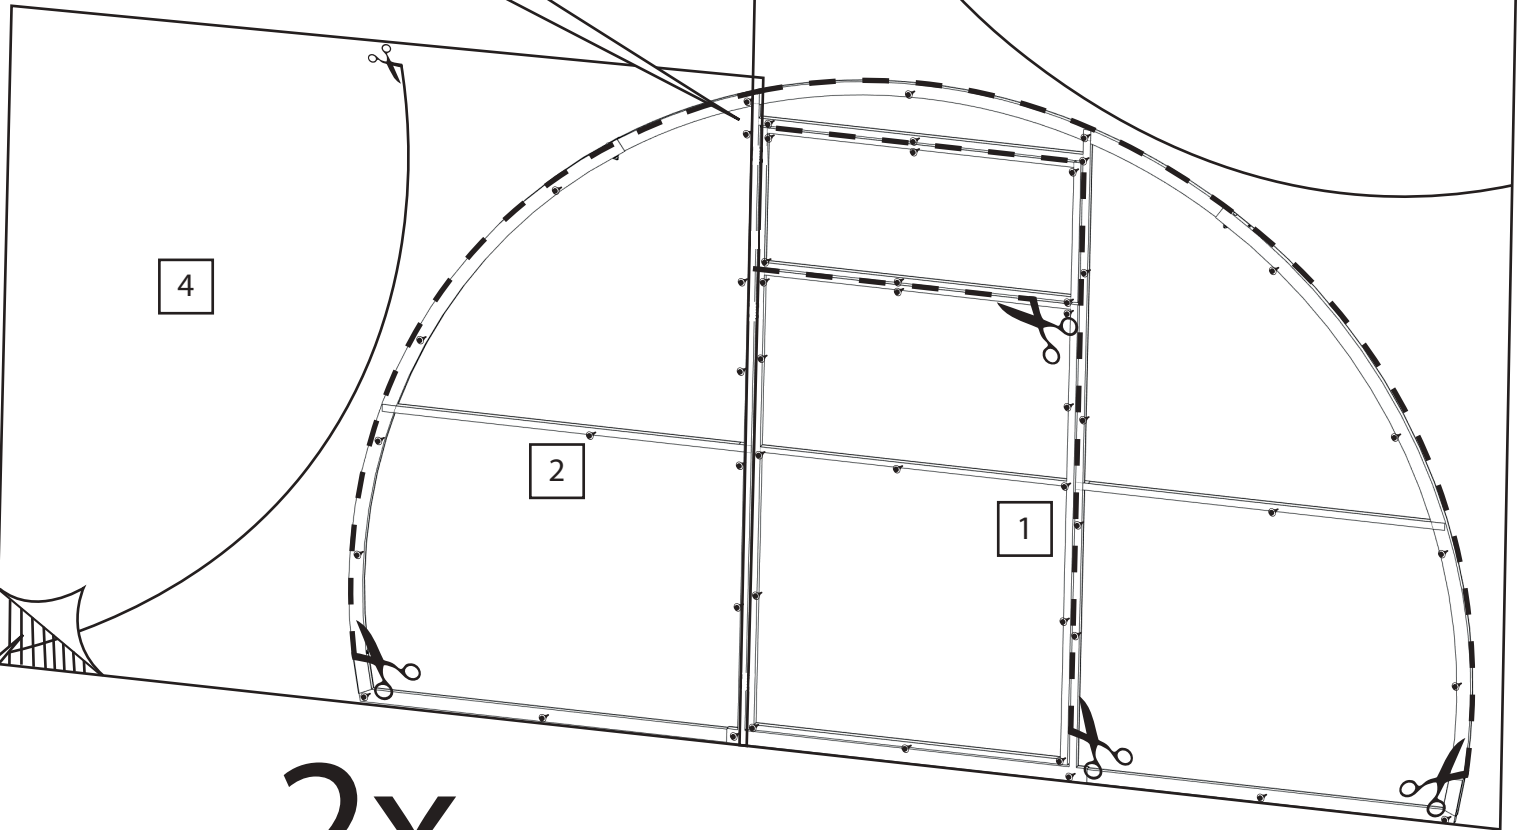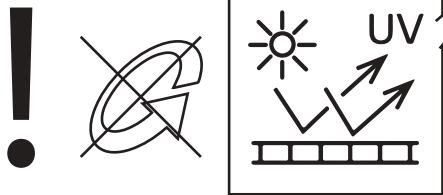
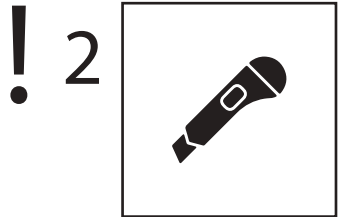
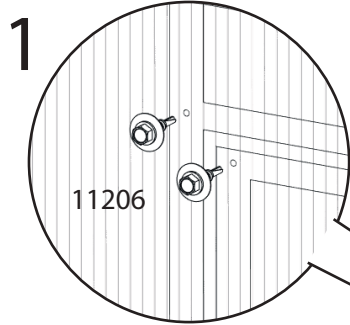


2x





6

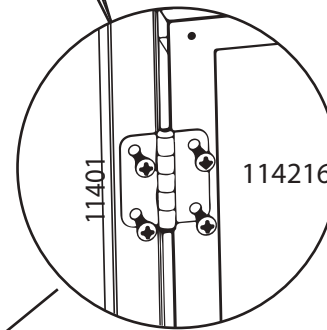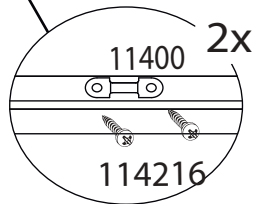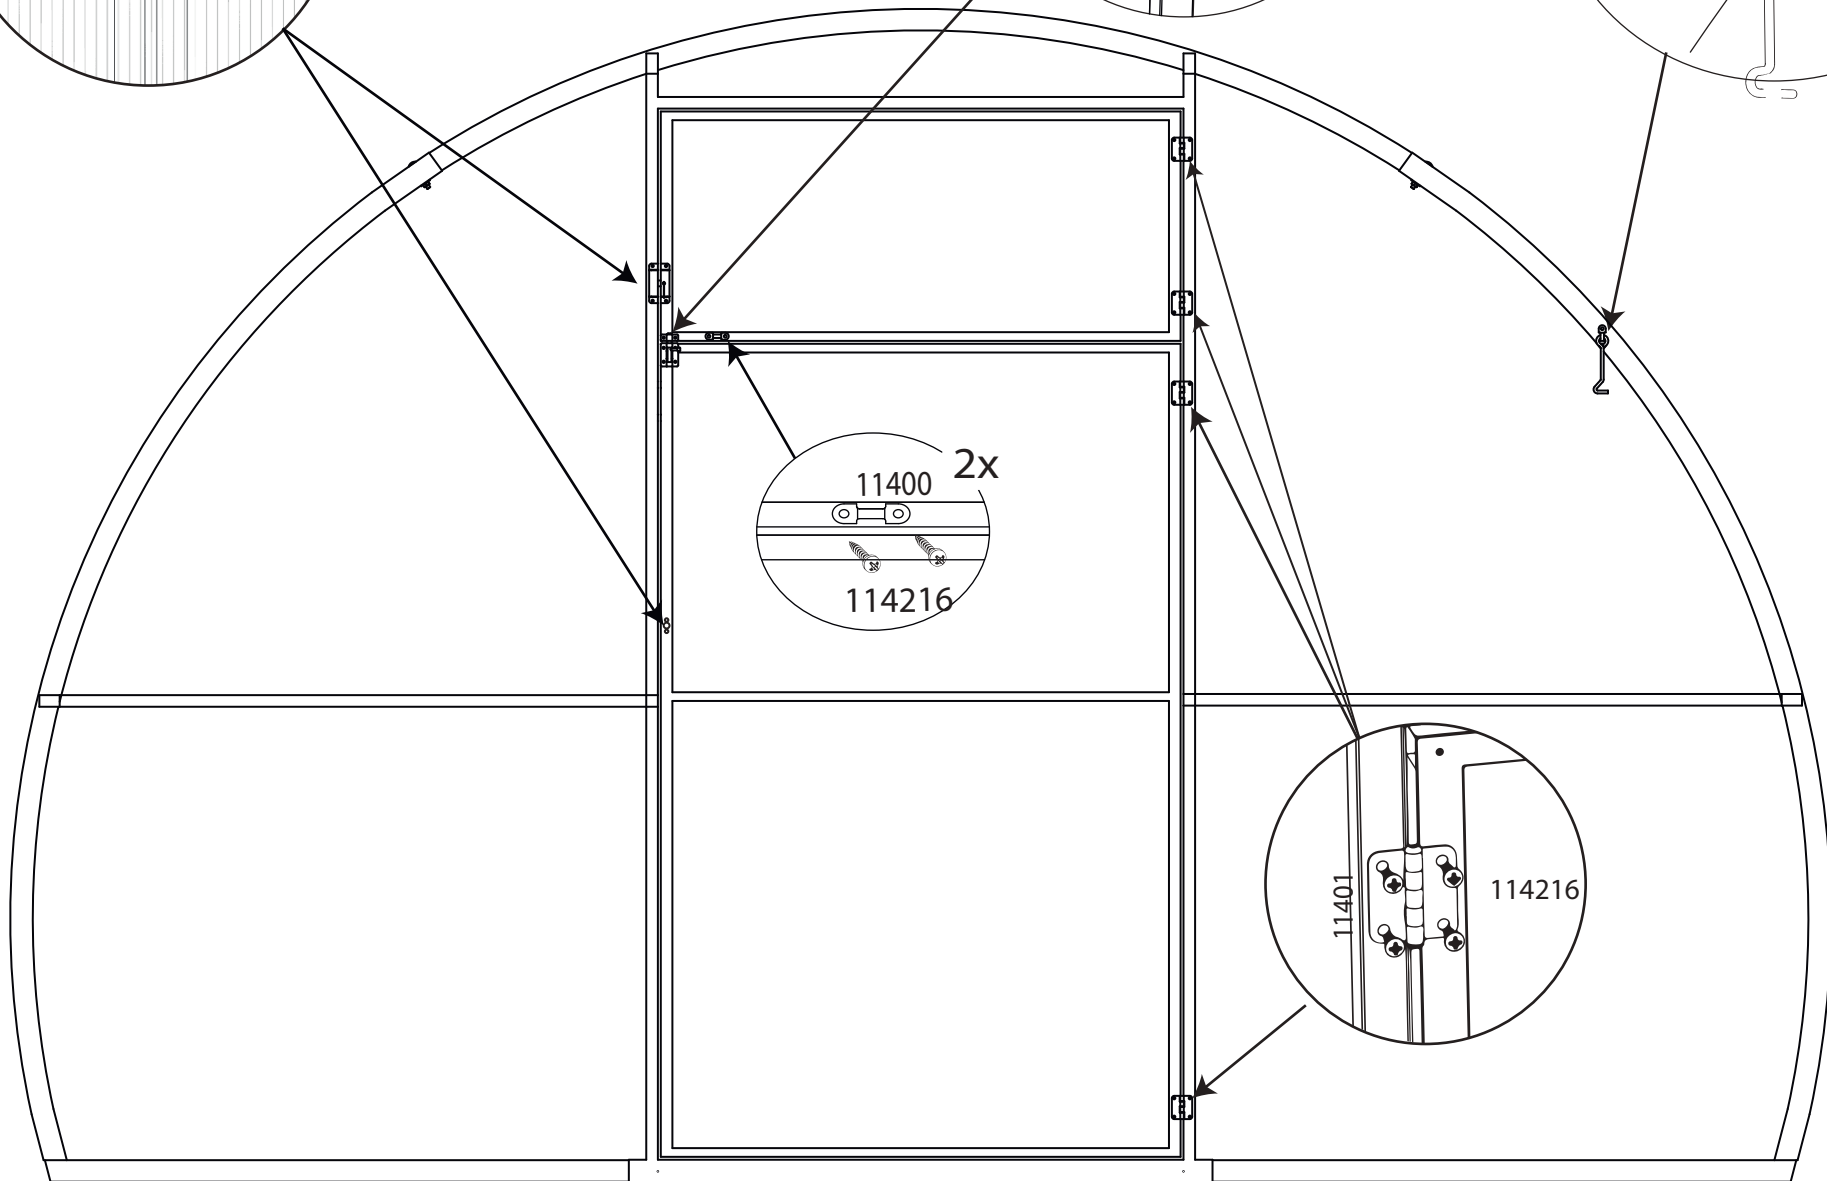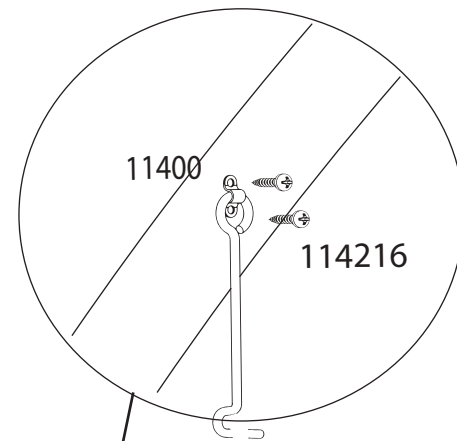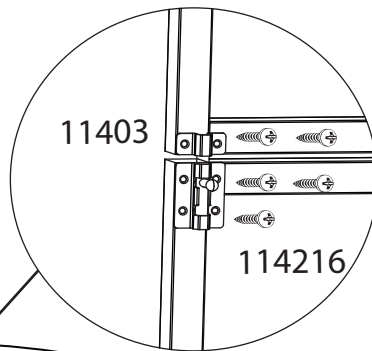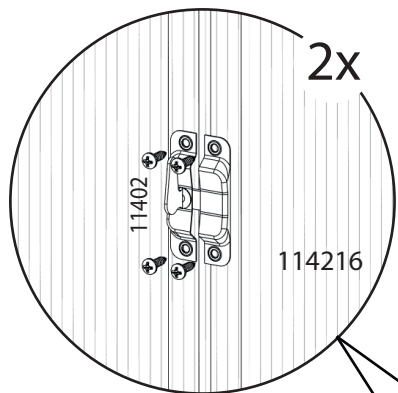


7

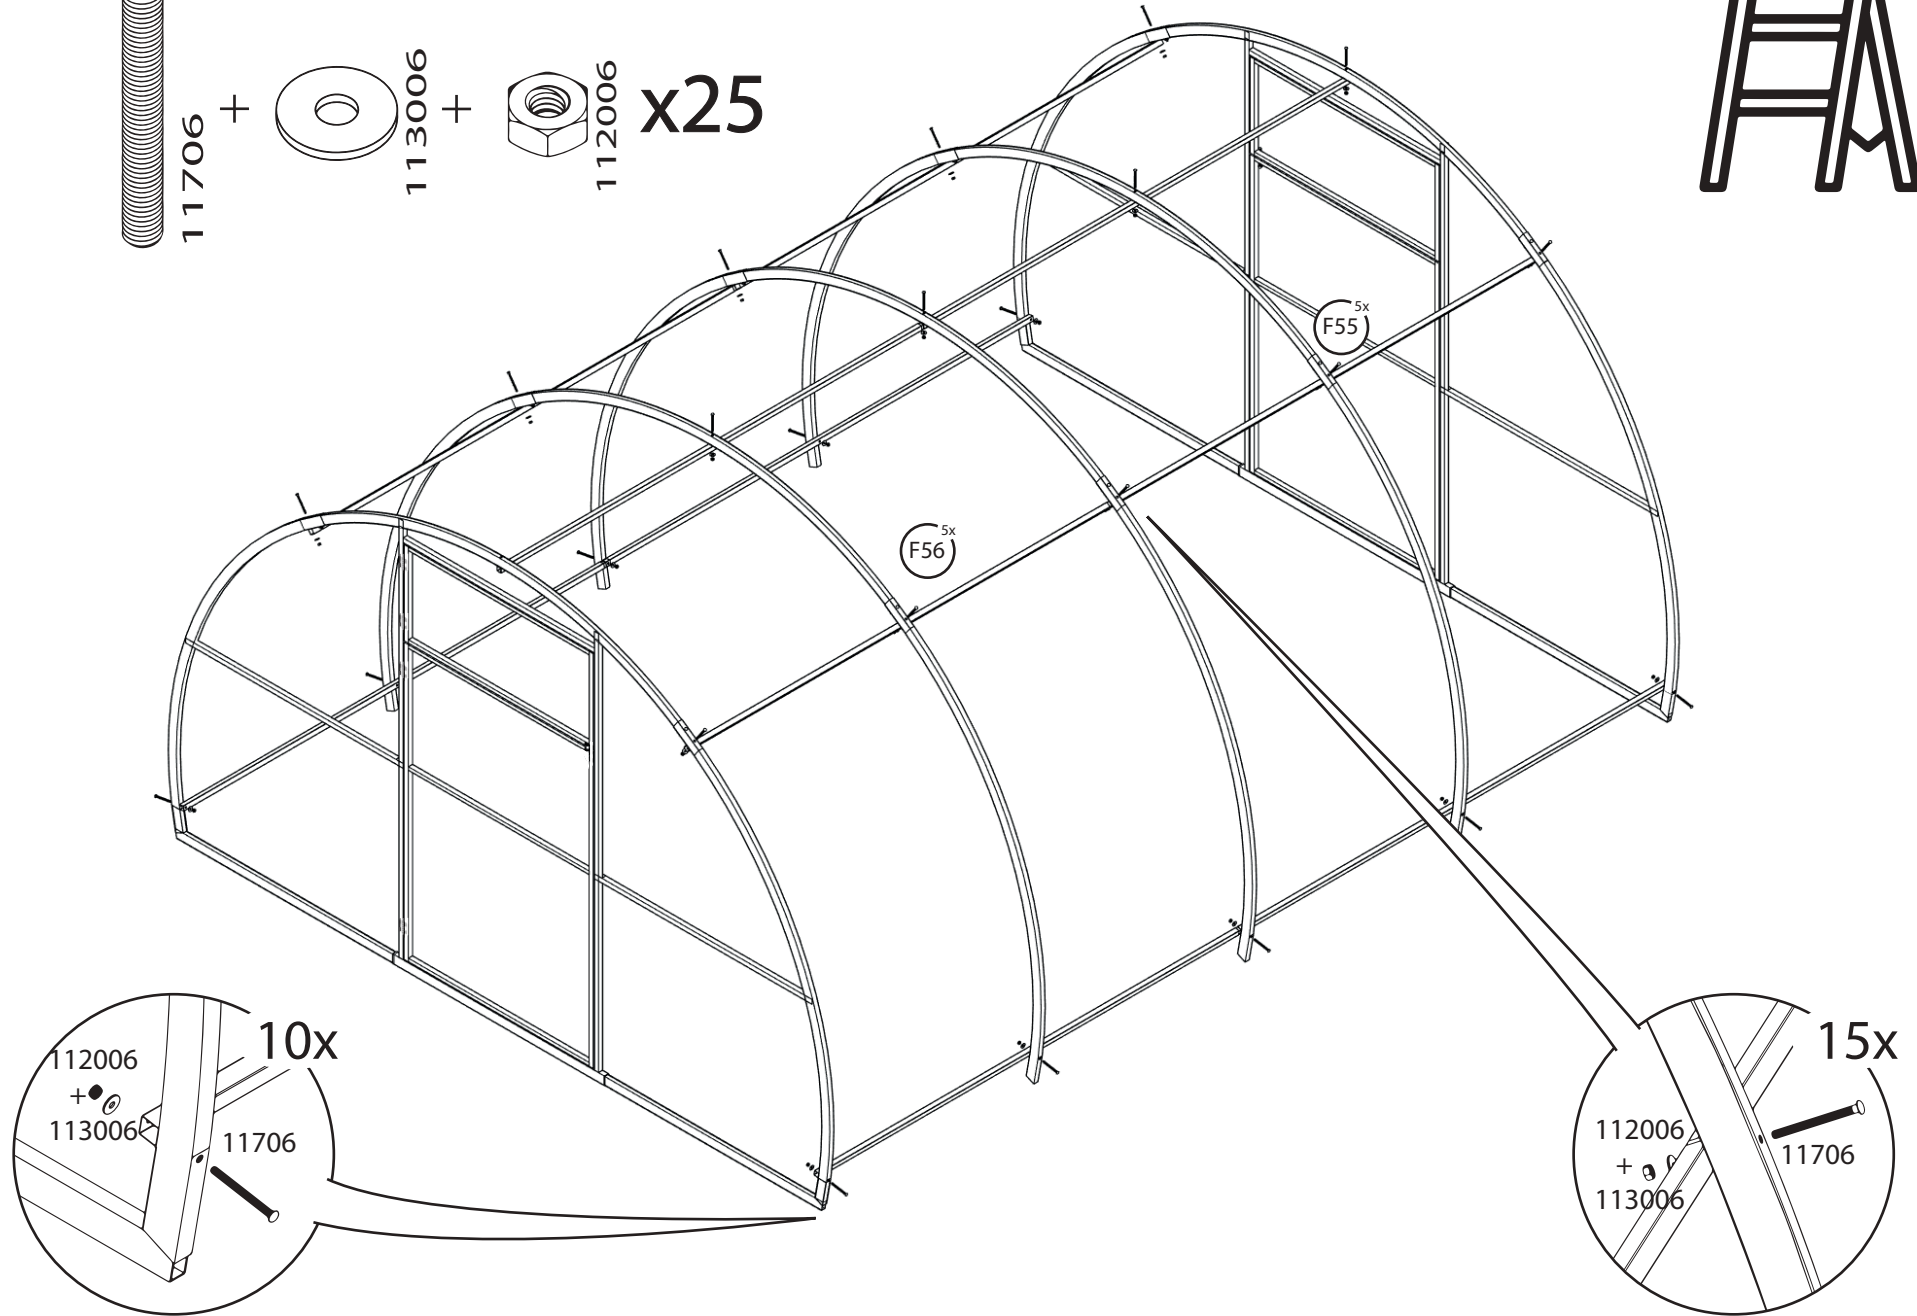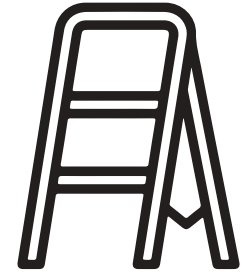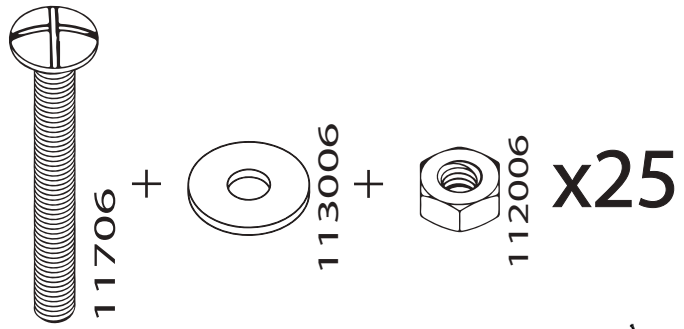

8

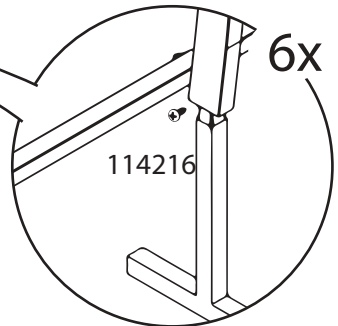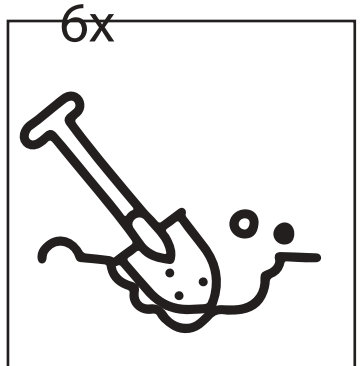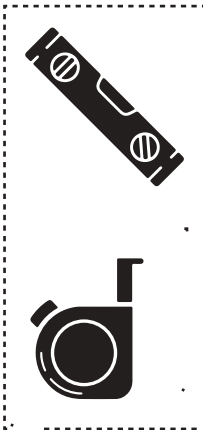
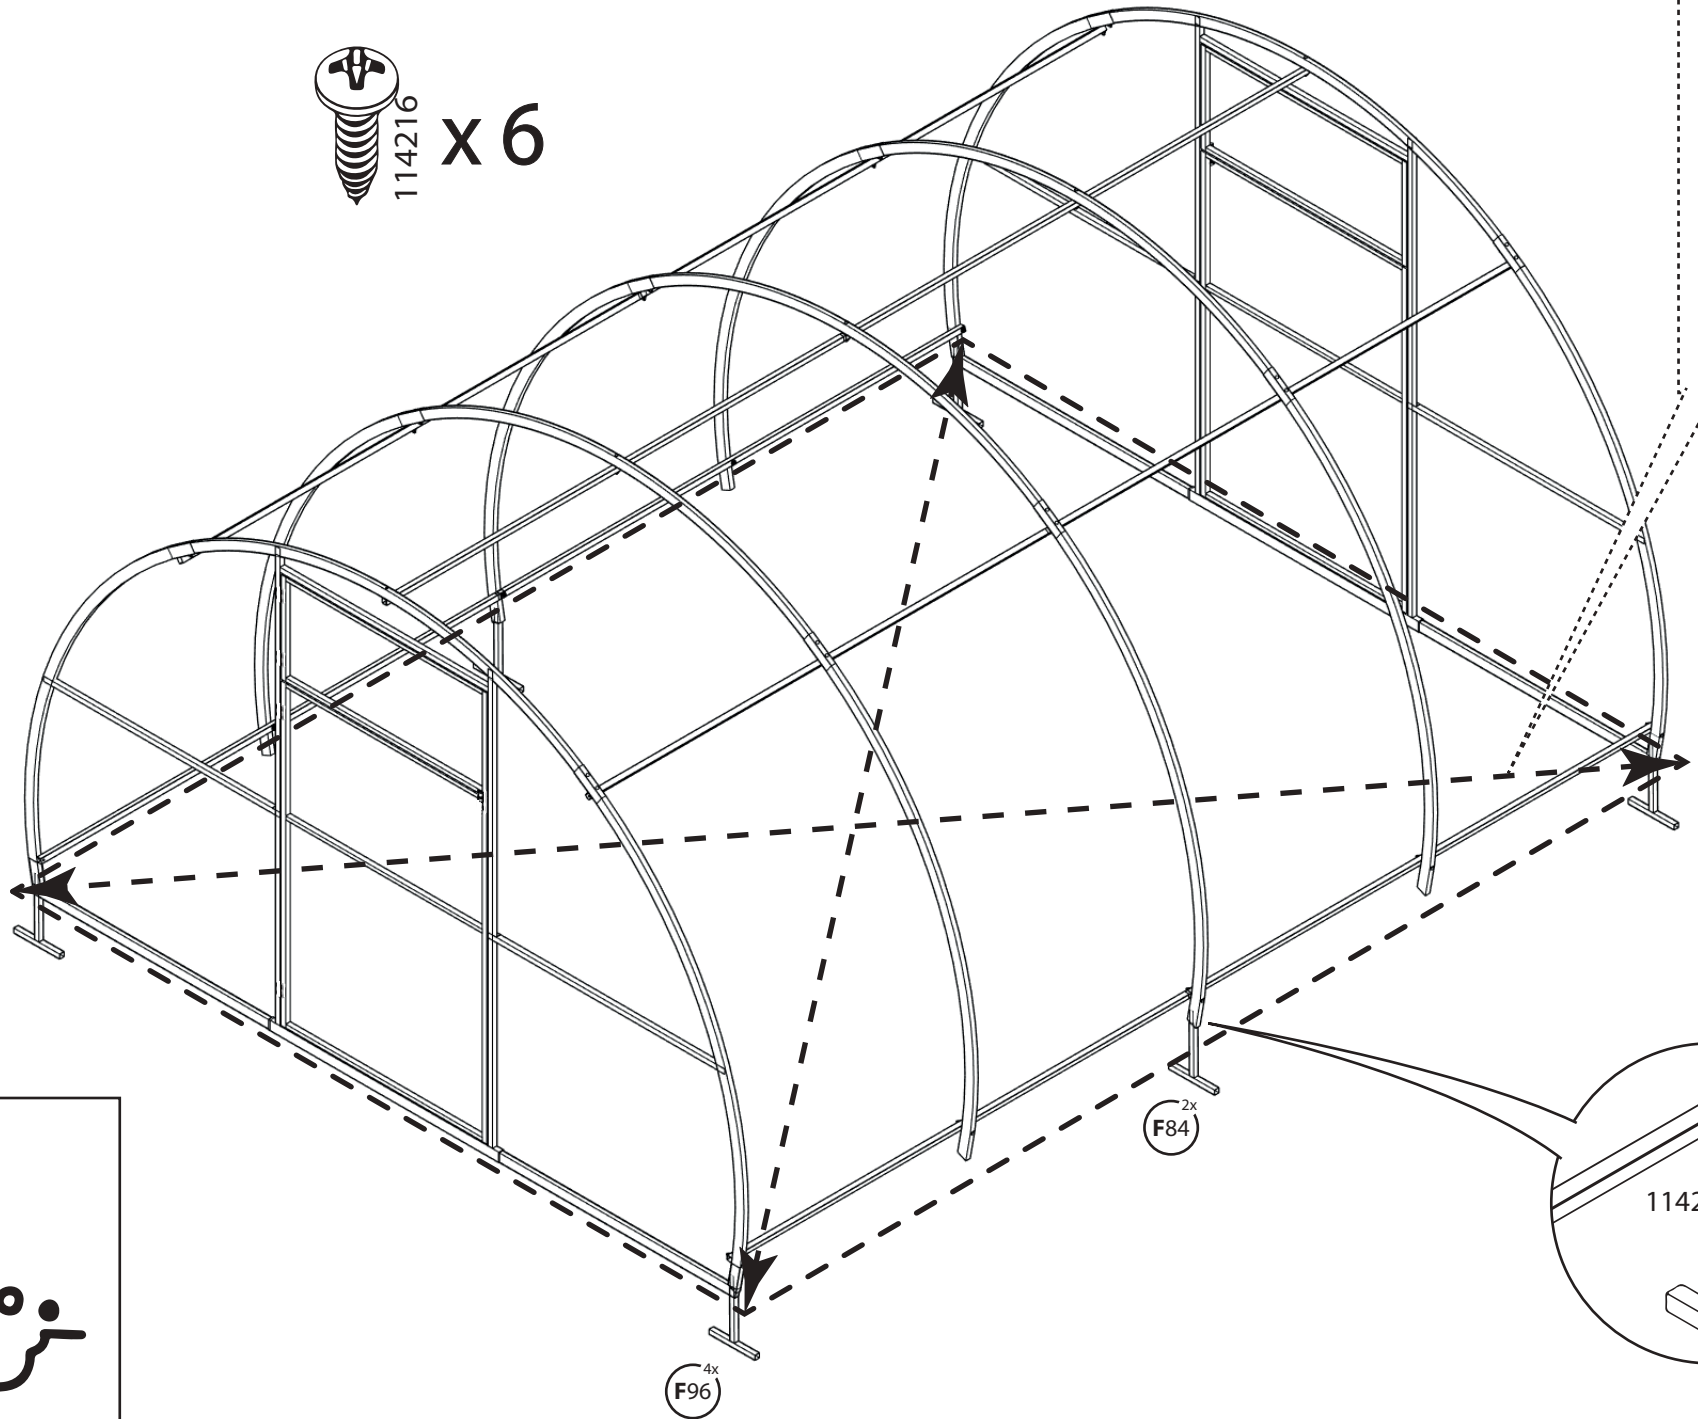


9



11206






x40

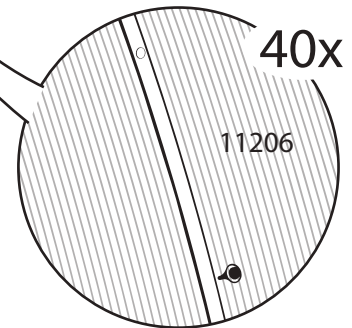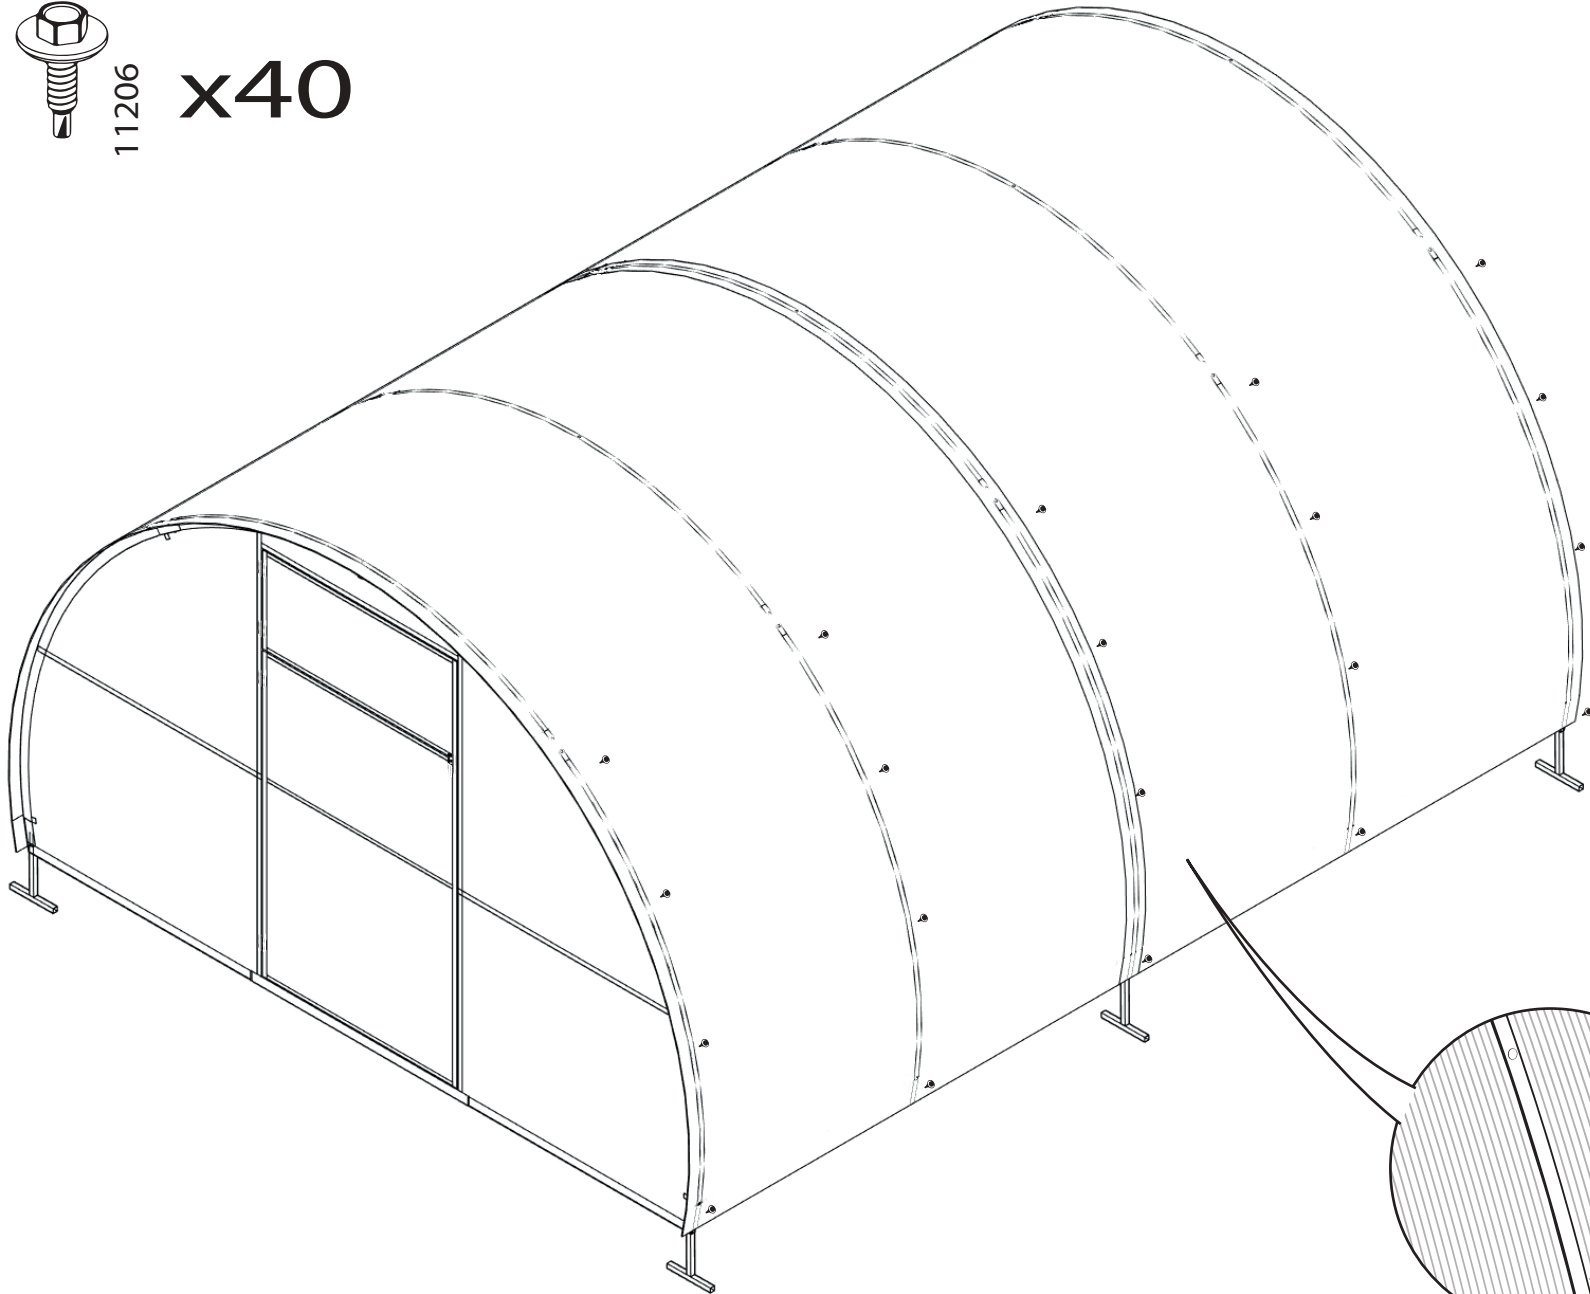


40x

11206

2m Extension Kit

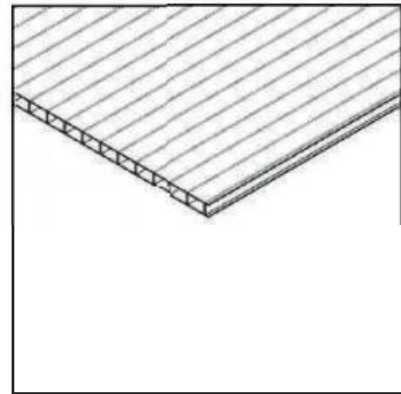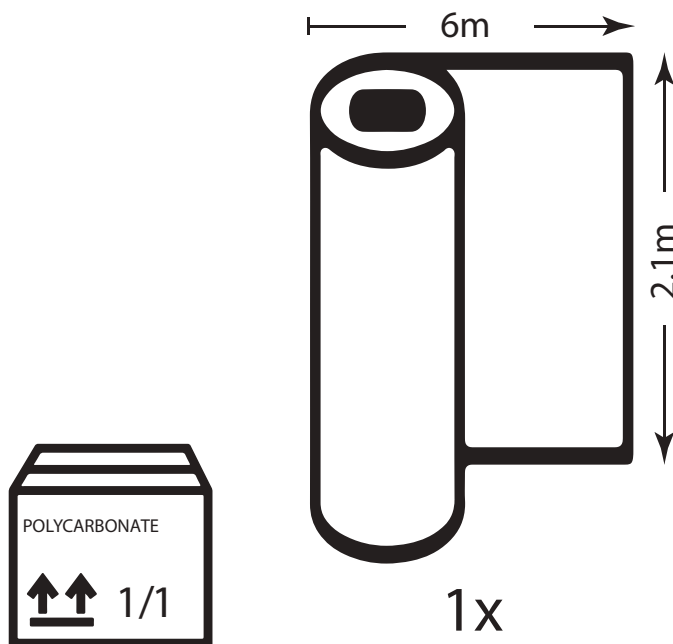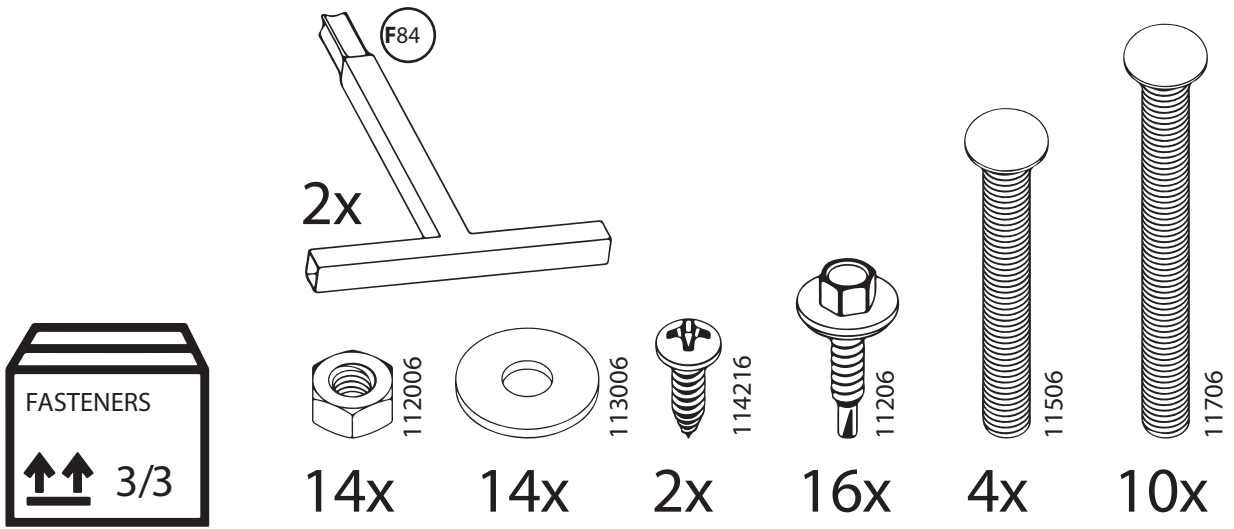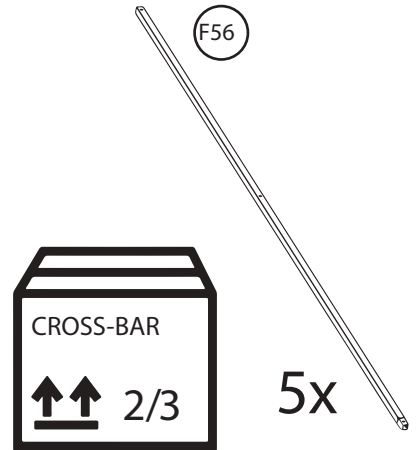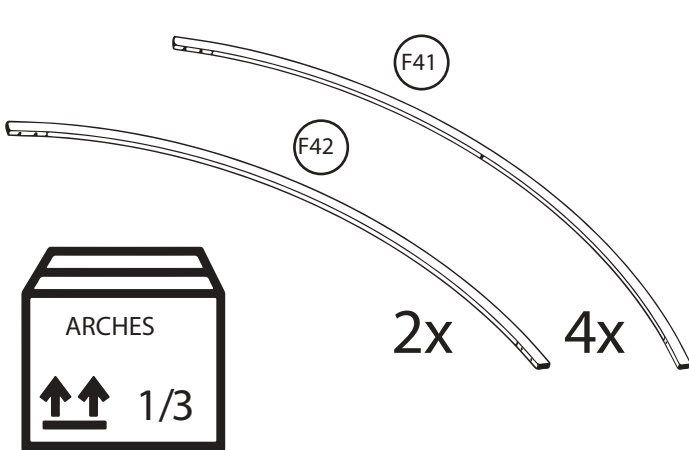


10 (REPEAT THE STEP FOR EACH EXTENSION KIT)

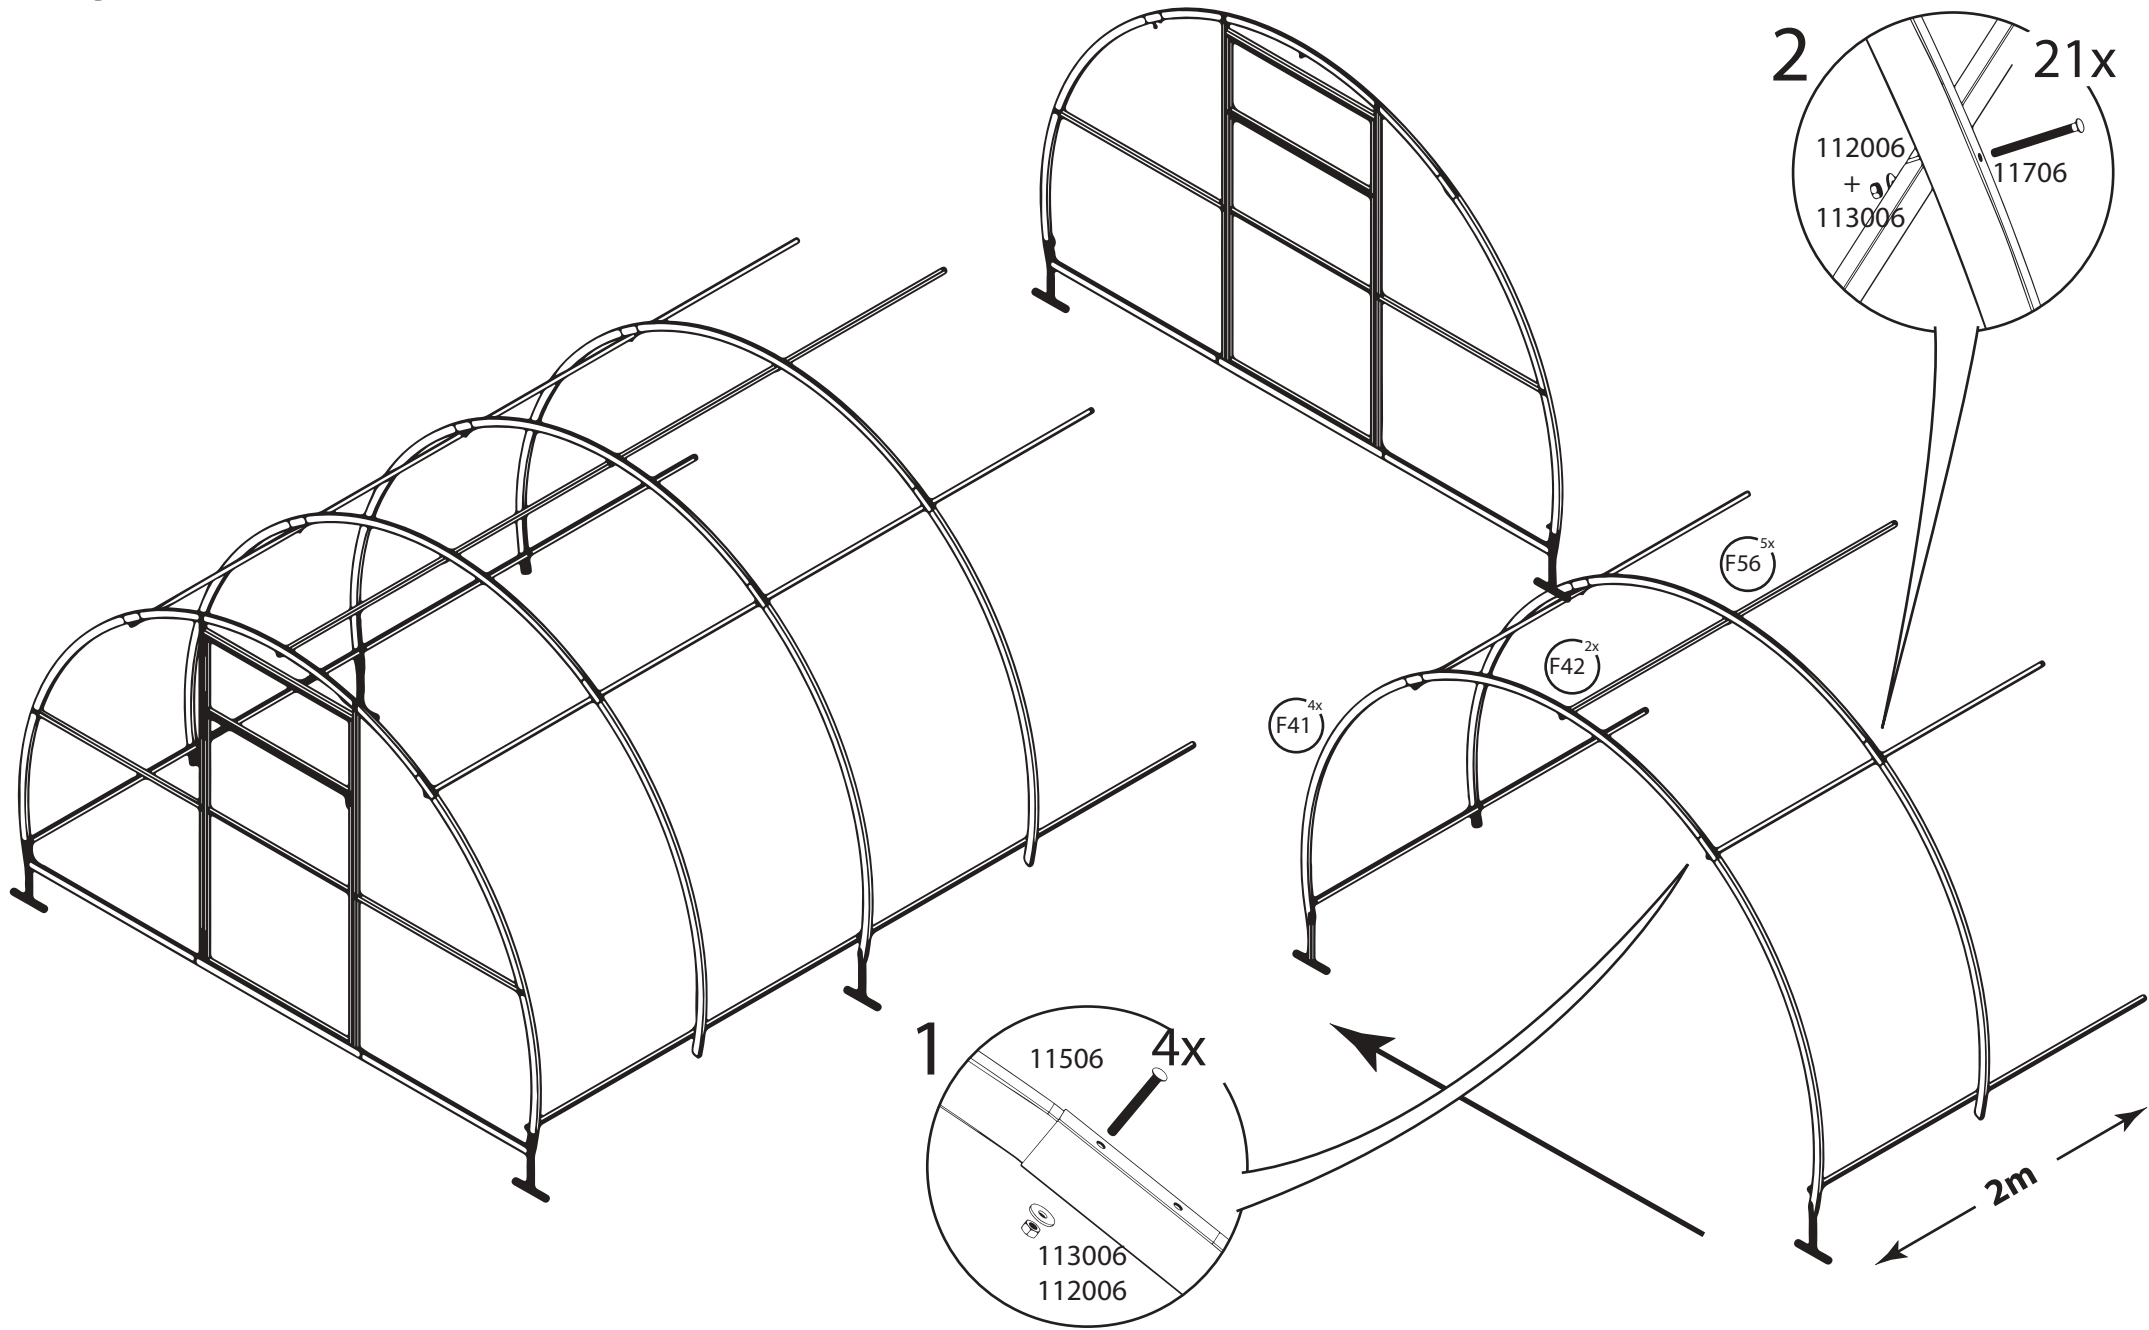

Polycarbonate


Boxes

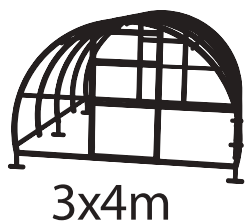


3x 2.1x6m




=4

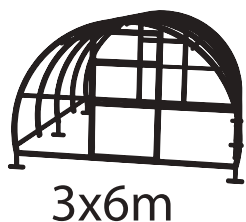


4x 2.1x6m

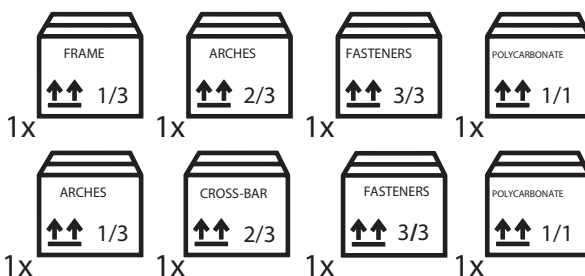


=8

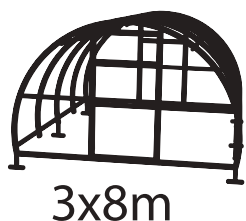


5x 2.1x6m

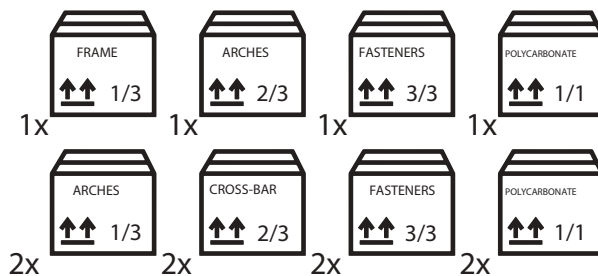


=12

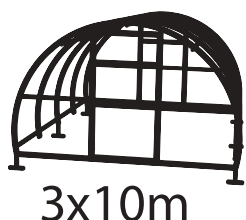


6x 2.1x6m

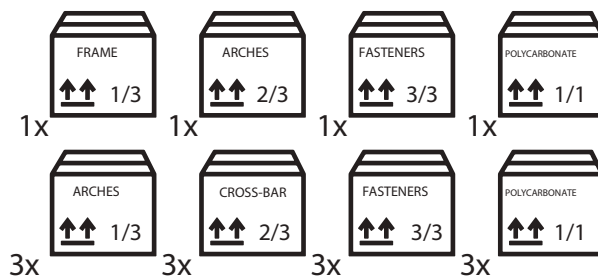

=16

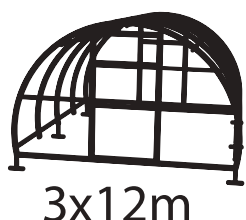

7x 2.1x6m

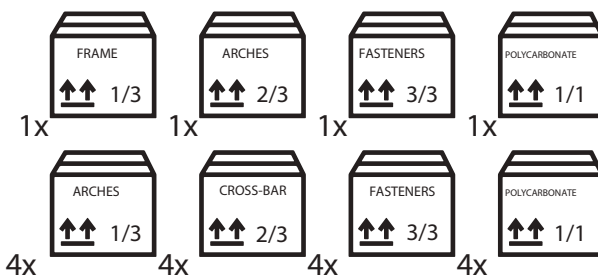

=20

NECESSARY TOOLS



Contact information

Austria



Belgium



Croatia



Denmark



Estonia



Finland



France



Germany



Ireland



Italy



Latvia



Lithuania



Nederland



Norway



Poland



Portugal



Spain



Sweden



Switzerland



UK

